



Spare Part Description	Item Number
Shaft Rotor	1/2/3/15
End-shield Drive-End	4
End-shield Brake Side	9
Fan and Fan assembly	11 e 12
Brake adjusters set with springs and nuts	From 18 to 22
Brake Disc	23
Brake disc 'K' type with steel hub	23
Fly wheel disc	From 43 to 47
Brake friction surface (rear cover)	17
Brake moving element	24
Brake coil (AC)	25
Brake coil (DC)	25
Brake cover with rear hexagonal nut	26 or 48 and 27
Double terminal board box with terminal board and screws	29
Single terminal box with screws	
Terminal cover with built-in type 'C' rectifier	87+28
Terminal box brake coil connection wires	34
Brake release screw	49
Flange (B5)	36
Flange (B14)	37
Brake assembly (BA, CF)	From 18 to 27
Brake assembly (CFF, BAF)	39-40-41-42-18-20-21-22-24-25-27
Brake assembly (CFPV, BAPV)	42-43-44-45-46-47 48-18-20-21-22-24-25-27
Terminal board w/nuts and washers	30
Pair of brake discs (BAF, CFF)	39 e 41
Intermediate brake surface (BAF, CFF)	40
Fulcrum hub for brake release	50
"T" key for manual shaft rotation	51
Fulcrum hub for brake release	27
Rectifier "Q" type	
Rectifier "M" type	
Double terminal board	
Rectifier "Q" and "M" type	

